



World's Best Metal Detection Technologies
ZVT Super-D GPS Wi-Stream

Part No. 4903-005-ID-1



www.mineLab.com



Panduan Lapangan

Field Guide


GPZ 7000

Quick Start

Mulai Cepat

1

Turn On and wait for battery indicator
Nyalaan dan tunggu indikator baterai

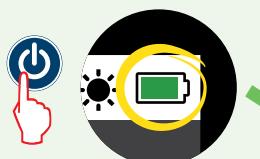

2

Select Quick Start
Pilih Mulai Cepat



3

Select Reset Settings
Pilih Atur Ulang Pengaturan




4

Noise Cancel
Peredam Bising




5

Quick-Trak
Quick-Trak

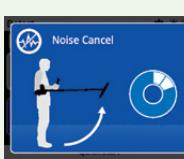

6

Start Detecting
Mulai Mendeteksi

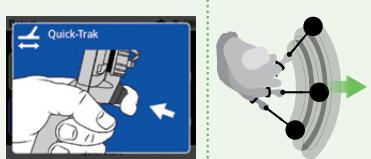


Threshold Level

Level Ambang Batas

1



2

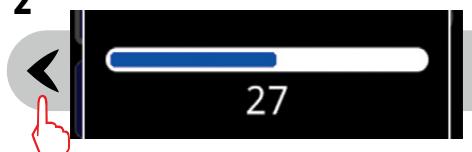

3





Connect WM 12 (optional)

Sambungkan WM 12 (opsional)

1

Select 'Connect WM 12'
Pilih 'Sambungkan WM 12'

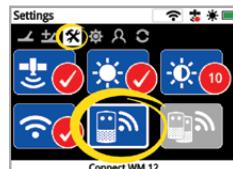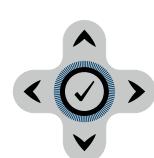

2

Follow the on-screen instructions
Ikuti petunjuk di layar



Gold Mode

Mode Emas

Ground Type

Jenis Tanah

High Yield Hasil Tinggi

Small/Medium nuggets
Bongkahan Kecil/Sedang

General Umum

General nuggets
Bongkahan umum

Extra Deep Ekstra Dalam

Deep large nuggets
Bongkahan besar yang dalam

Normal Normal





Low soil mineralisation
Mineralisasi tanah rendah

Difficult Sulit

High soil mineralisation
Mineralisasi tanah tinggi

Severe Parah


Severe soil mineralisation
Mineralisasi tanah parah

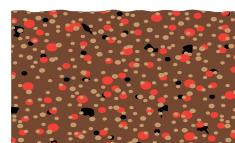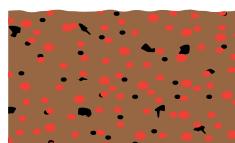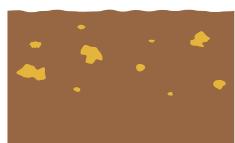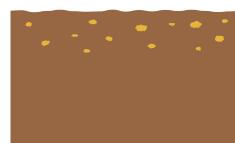

Quick-Trak



1

Keep coil close to ground
Jaga koil tetap dekat dengan tanah

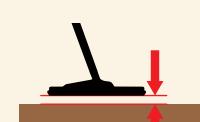

2

Sweep coil over one spot
Sapu koil di atas satu tempat

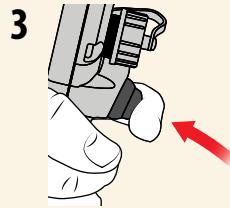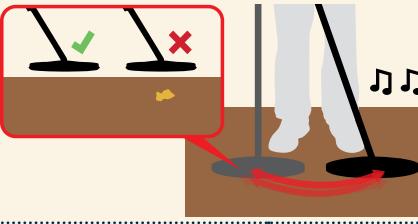



3

Sweep until audio is stable
Sapu hingga audio stabil





4

Start detecting
Mulai mendeteksi

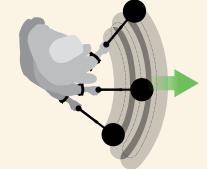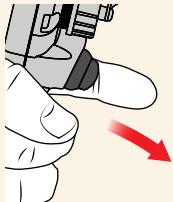

Detecting Basics

Dasar-Dasar Pendeksiian

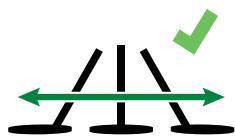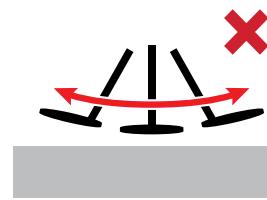


Sweep level
Tingkat sapuan



Keep metal away
from coil
Jauhkan logam
dari koil





Sweep slowly
Sapu perlahan

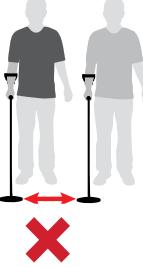


Recommended 15 m
Direkomendasikan 15 m

Move apart
Pindah tempat

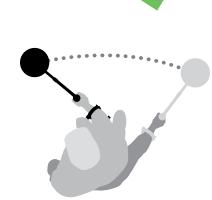
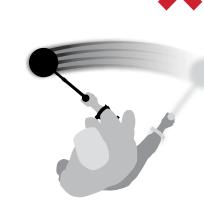


Sweep slowly
Sapu perlahan


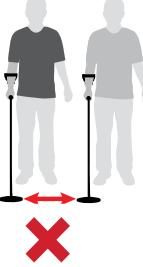


Recommended 15 m
Direkomendasikan 15 m

Move apart
Pindah tempat

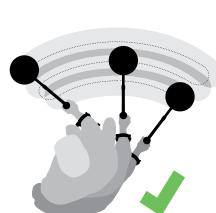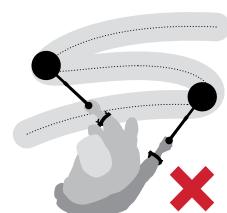

Overlap sweep
Sapuan yang
tumpang tindih

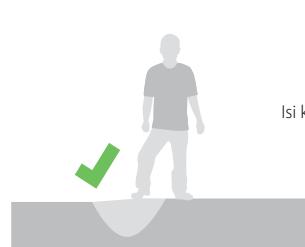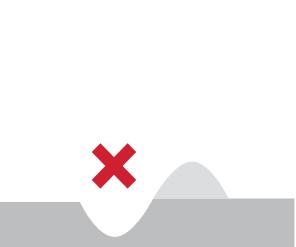

Refill hole
Isi kembali lubang